## **TP-LINK ADSL+2 Modem Router Configuration Process:**


- 1. Connecting your computer to the modem router (Wired or Wireless)
  - Wired

Connect the computer to your modem router and the LAN LED lights up


Wireless

Connect wirelessly by using the SSID (network name) and Wireless Password printed on the product label at the bottom of the modem router.


- 2. Configuring the modem router via a web browser Launch a web browser and type in http://tplinkmodem.net or 192.168.1.1
- 3. Go to the Quick Setup
- 4. Click on Next

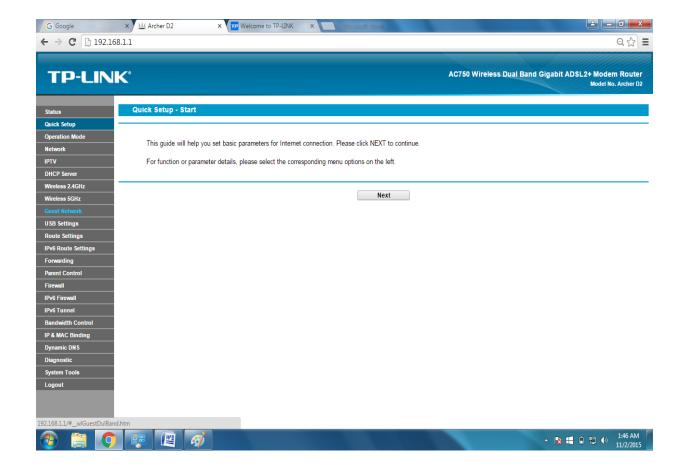


5. Select your Region and Time Zone, then click Next.

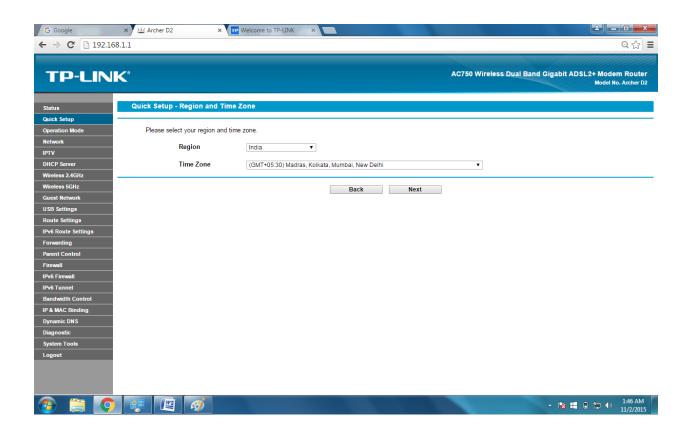


6. Choose Auto Detect connection type.

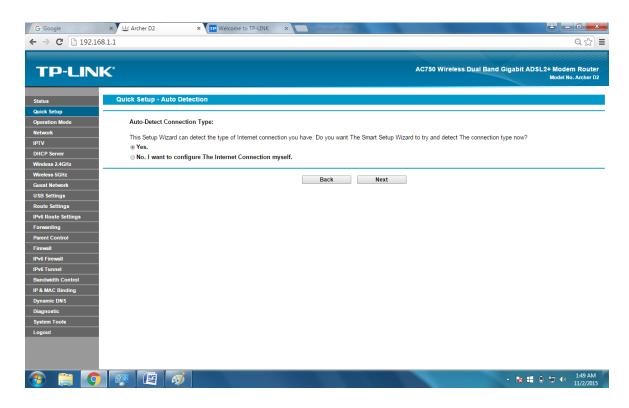


7. Enter Username and password given by ISP.

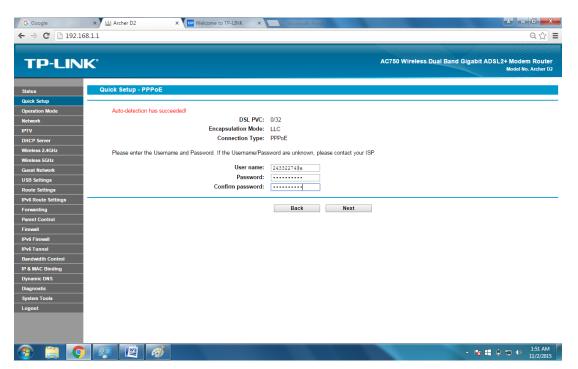

8. Select WPA-2 Security and type password, then click on Next.

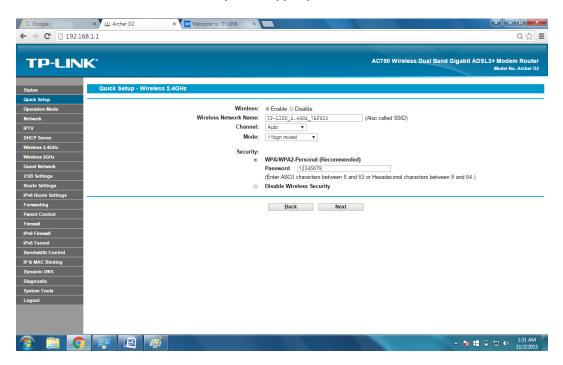

9. Now Quick Setup is done and click on save.

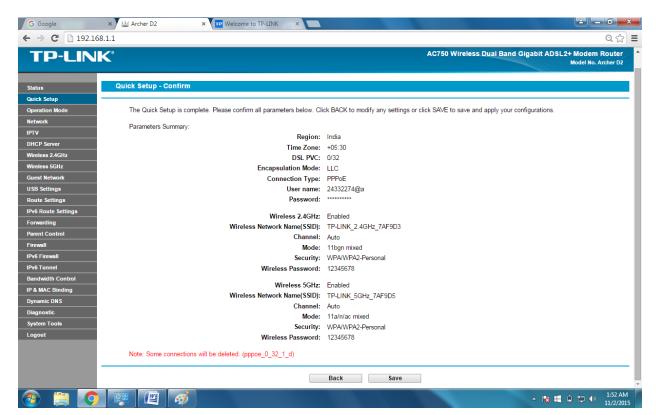

## 10.Click on Finish.

